



USER MANUAL – EN
IN 25801 WORKER Supertable 13 in 1 Game Table



CONTENTS

SAFETY INSTRUCTIONS..... 3
PARTS LIST 3
ASSEMBLY 5
ENVIRONMENT PROTECTION 10
TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS..... 10

SevenSport s.r.o. reserves the right to make any changes and improvements to its product without prior notice. Visit our website www.insportline.eu where you will find the latest version of the manual.


 
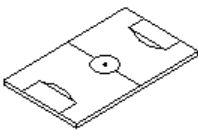

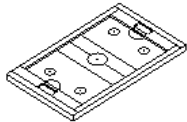







SAFETY INSTRUCTIONS




 
 



 





 

 






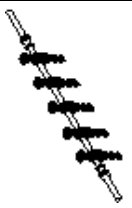

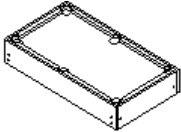

 


- Read the entire manual before assembly and store it for future reference.
- Before assembly, make sure that no parts are missing.
- The game set contains small parts. There is a risk of suffocation.
- Two adults are required to build a table.
- Keep children and pets out of range during assembly. There is a risk of suffocation.
- For home and recreational use.








 

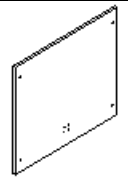
 
Inventory of games and accessories:

- Table football (2 x 11 players, 2 balls)
- Basketball (accessories for basketball, small ball included)
- Push-hockey (2 strikers, 2 pucks)
- Ping-pong (net, 2 bats, 2 balls)
- Mini billiards (billiard balls set, 2 cues, triangle, 2 chalks)
- Cards, dice (set of cards, dice)
- Mini-bowling (bowling set)
- Chess (kit of chess)
- Draughts (set for draughts)
- Backgammon (set for backgammon)
- Shuffle board - throwing stones (shuffleboard set)
- Horse-shoe - throwing horseshoes (set for a horse-shoe)
- Ring toss - throwing rings on a target (set for Ring toss)

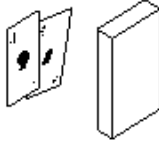PARTS LIST
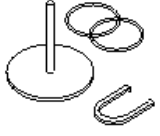
| 1 | 2 | 3 | 4 | 5 | 6 |
|---|---|---|---|---|---|
|  |  |  |  |  |  |
| Side board 2 pcs | Side board 2 pcs | Playing board - football field 1 pcs | Support 2 pcs | Playing board - hockey field 1 pcs | Side board 2 pcs |
| 7 | 8 | 9 | 10 | 11 | 12 |
|  |  |  |  |  |  |
| 6X30 mm bolt 12 pcs | 18X6.5 mm washer 12 pcs | 3.5X10.5 mm self-tapping screw 12 pcs | 3.5X35 mm self-tapping screw 12 pcs | 3.5X12 mm self-tapping screw 32 pcs | 4X30 mm round head screw 4 pcs |
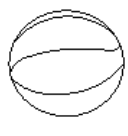
| | | | | | |
|---|---|---|---|---|---|
| 13 | 14 | 15 | 16 | 17 | 18 |
|  |  |  |  |  |  |
| Rod – 1 blue player 1 pcs | Rod – 2 blue players 1 pcs | Rod – 3 blue players 1 pcs | Rod – 5 blue players 1 pcs | Rod – 1 red player 1 pcs | Rod – 2 red players 1 pcs |
| 19 | 20 | 21 | 22 | 23 | 24 |
|  |  |  |  |  |  |
| Rod – 3 red players 1 pcs | Rod – 5 red players 1 pcs | Handle 8 pcs | End cap 8 pcs | Football 2 pcs | Playing board – Billiards 1 pcs |
| 25 | 26 | 27 | 28 | 29 | 30 |
|  |  |  |  |  |  |
| Left leg 2 pcs | Right leg 2 pcs | Goal 2 pcs | Locking pin 2 pcs | BILLIARD balls 1 set | Cue 2 pcs |
| 31 | 32 | 33 | 34 | 35 | 36 |
|  |  |  |  |  |  |
| Chalk 2 pcs | Triangle 1 pcs | Hockey stick 2 pcs | Hockey puck 2 pcs | Playing board – BOWLING 1 pcs | Skittles 1 set |
| 37 | 38 | 39 | 40 | 41 | 42 |
|  |  |  |  |  |  |
| Chess 1 set | Checkers 1 set | Set for table tennis 1 set | Backgammon 1 set | Cards 1 pcs | Playing ball 1 set |
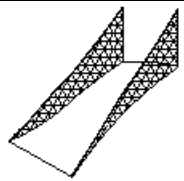
| | | | | | |
|---|---|---|---|---|---|
| 43 | 44 | 45 | 46 | 47 | 48 |
|  |  |  |  |  |  |
| Ring toss 1 set | Score indicator 2 pcs | Allen key 1 pcs | Basketball 1 pcs | Steel grooves 4 pcs | Basketball hoop 1 pcs |
| 49 | 50 | 51 | 52 | 53 | |
|  |  |  |  |  | |
| Slide with safety net 1 pcs | Pin 1 pcs | Pin 2 pcs | Back plate 1 pcs | Brush 1 pcs | |

ASSEMBLY

Warning: We recommend that two adults work together to assemble this game.

- 1) Open the carton of your new table game near where you will play. Select a clear level floor. This game requires at least two adults to assemble the table.
- 2) Remove all the contents from inside the carton and verify that you have all listed parts as shown on the Parts List. NOTE: The player-rods are pre-assembled. We suggest that you use the bottom carton as a clean flat working area to protect the game. Carefully cut or tear the four carton corners so that the bottom is now your work area.

Fig.1

- 3) Place one Side Apron (#1) with slotted side facing inward and the finished edge facing down. Slide the Player Rods (#13 through #20) through the Player Rod Bushing in the order shown in FIG.1. NOTE: Make sure that the player rods are installed properly. The players for each team must be facing the same direction.
- 4) Now slide the other Side Apron (#1) over the other ends of the Player Rods with the slotted side facing inward.

Fig.2

- 5) Attach one End Apron (#2) between the Side Aprons (#1) using two of Washer Head Screws (#10) per Side. NOTE: Leave connections loose - Do not tighten screws securely at this time.
- 6) Slide the Playfield (#3) with graphics facing down as shown in FIG 2.If the field does not slide smoothly, check to be sure you have not over tightened any screws or the playfield is not caught by the slot.

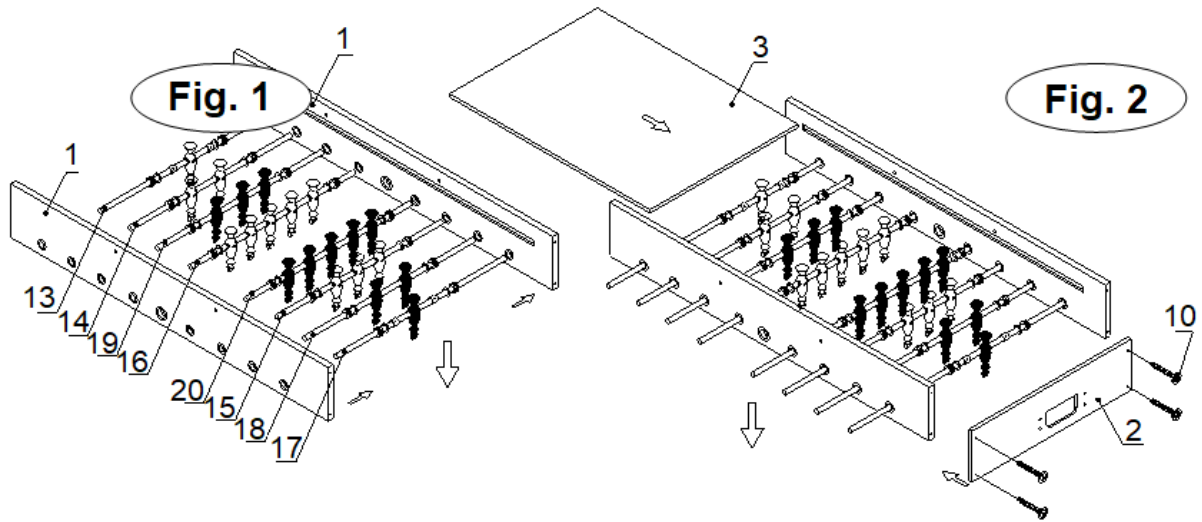


Fig.3

- 7) Repeat the step to attach the other End Apron to the Side Aprons (#1).
- 8) Place two Support Braces (#4) on Playfield (#3) as shown in FIG.3. Attach them using two of Washer Head Screw (#10) per side. See FIG.3.

Fig.4

- 9) Put Hand Grips (#21) and End Caps (#22) on the player rods in order. NOTE: To make the Handles easier to attach, spray a little window cleaner on the rod ends prior to installation and tap on gently with a hammer. See FIG.4.
- 10) Attach Goal Boxes (#27) to End Aprons using five of Washer Head Screws (#9) per Goal Box.
- 11) Place Scorers (#44) in the hole of Goal Boxes.

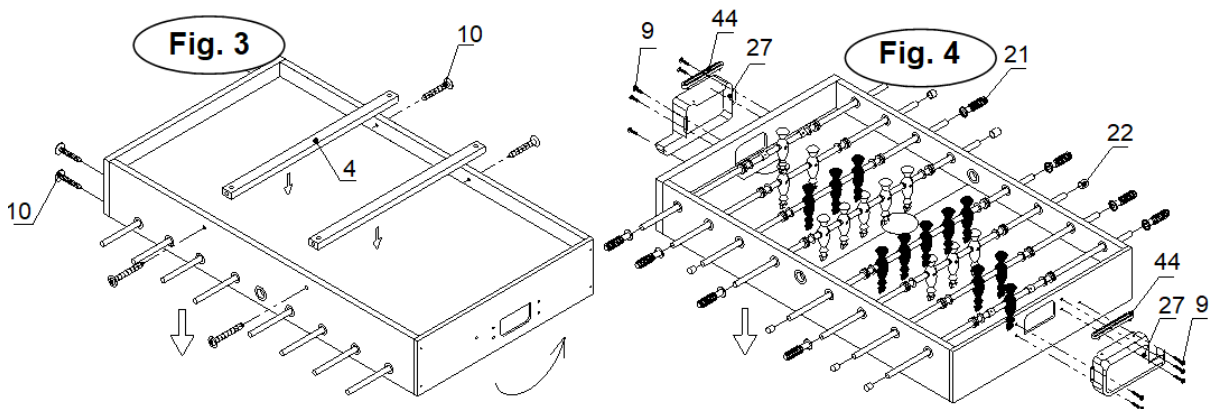


Fig.5

- 12) Attach Left (#25) and Right (#26) Legs to the cabinet using three of Bolts (#7) and three of Washers (#8) per Leg. See FIG.5.
- 13) Attach the two End Leg Braces (#6) to the legs using three of Washer Head Screws (#11) per Leg. See FIG.5.


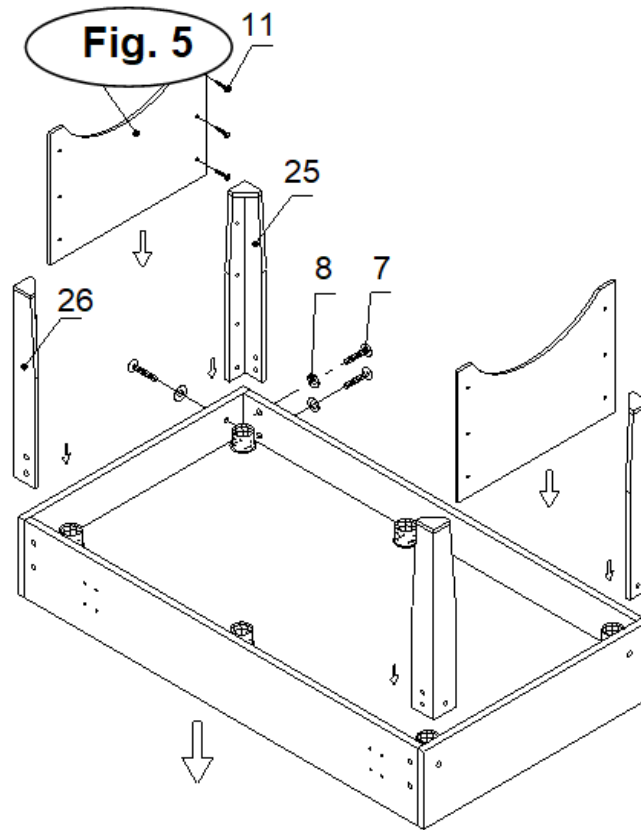


Fig.6

- 14) Attach the Steel Slices (#47) to the cabinet using four of Washer Head Screws (#11) per Steel Slice. See FIG.6.
- 15) Lift the table assembly from the floor with two strong adults, turn it over, and set table on its legs in the location where you will play. Go back and make sure that all connections are tight.

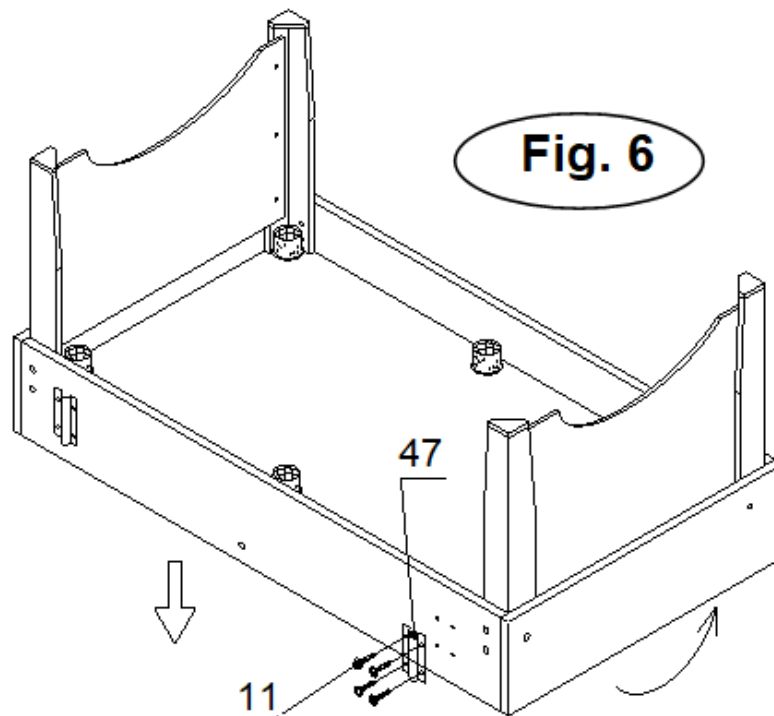

CAUTION: Two strong adults are recommended to flip the table as shown.

1. Grab the table on the ground.
2. Turn the table over.
3. Place it on all four feet at the same time on the ground.

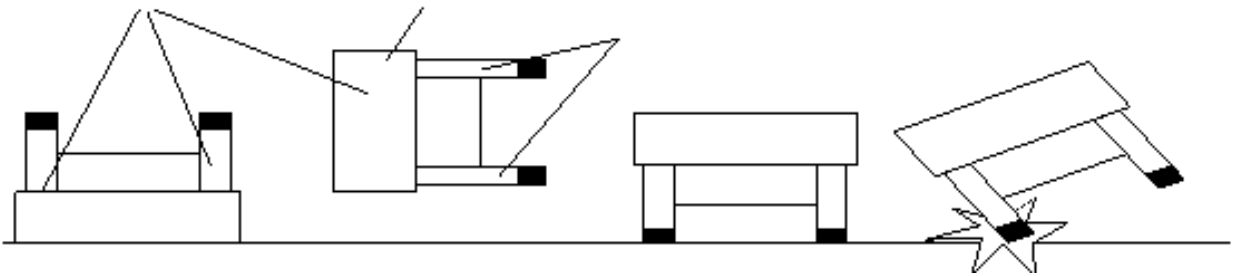


Fig.7

- 16) Insert the hobs (#50 & #51) with the slide way net (#49) into the steel slices (#47).
- 17) Attach the Backboard (#52) to the Hobs using four of Round Head Screws (#12). See FIG.7. Then attach A Basket Ring (#48) to Backboard (#52) using four of Washer Head Screws (#11).


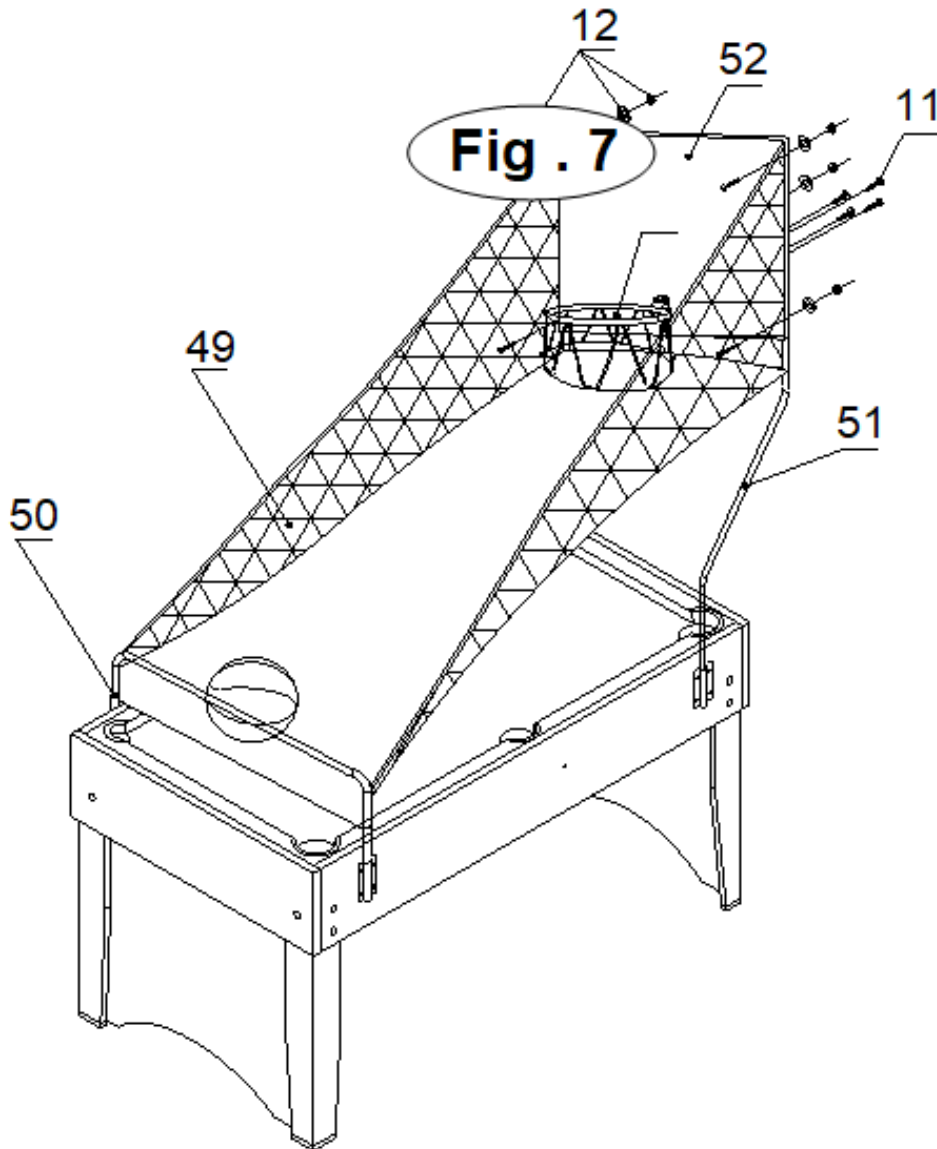


Fig.8

- 18) Place Scorers (#44) in the hole of TT/Hockey Playfield.
- 19) Attach Locking Pins (#28) to table using one of Washer Head screws (#9) per Side as show in FIG.8.

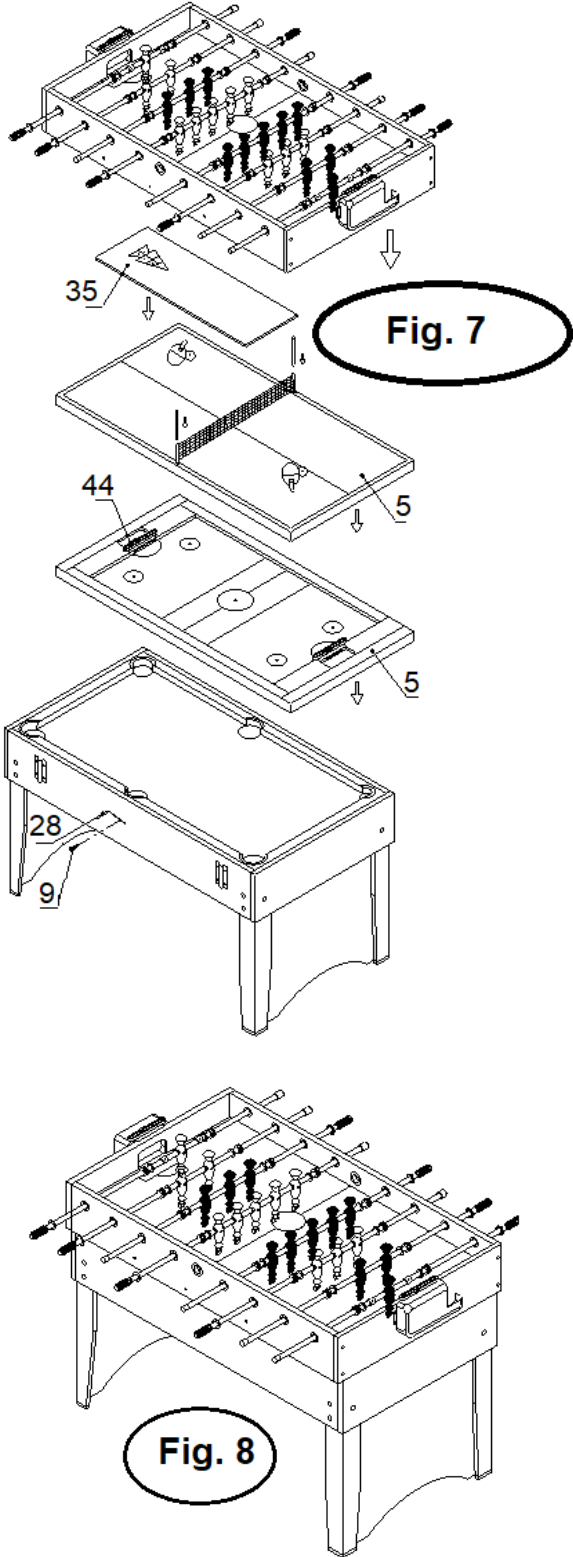

Assembly is done.

ENVIRONMENT PROTECTION

After the product lifespan expired or if the possible repairing is uneconomic, dispose it according to the local laws and environmentally friendly in the nearest scrapyards.

By proper disposal you will protect the environment and natural sources. Moreover, you can help protect human health. If you are not sure in correct disposing, ask local authorities to avoid law violation or sanctions.

TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS

General Conditions of Warranty and Definition of Terms

All Warranty Conditions stated here under determine Warranty Coverage and Warranty Claim Procedure. Conditions of Warranty and Warranty Claims are governed by Act No. 89/2012 Coll. Civil Code, and Act No. 634/1992 Coll., Consumer Protection, as amended, also in cases that are not specified by these Warranty rules.

The seller is SEVEN SPORT s.r.o. with its registered office in Strakonická street 1151/2c, Prague 150 00, Company Registration Number: 26847264, registered in the Trade Register at Regional Court in Prague, Section C, Insert No. 116888.

According to valid legal regulations it depends whether the Buyer is the End Customer or not.

“The Buyer who is the End Customer” or simply the “End Customer” is the legal entity that does not conclude and execute the Contract in order to run or promote his own trade or business activities.

“The Buyer who is not the End Customer” is a Businessman that buys Goods or uses services for the purpose of using the Goods or services for his own business activities. The Buyer conforms to the General Purchase Agreement and business conditions.

These Conditions of Warranty and Warranty Claims are an integral part of every Purchase Agreement made between the Seller and the Buyer. All Warranty Conditions are valid and binding, unless otherwise specified in the Purchase Agreement, in the Amendment to this Contract or in another written agreement.

Warranty Conditions

Warranty Period

The Seller provides the Buyer a 24 months Warranty for Goods Quality, unless otherwise specified in the Certificate of Warranty, Invoice, Bill of Delivery or other documents related to the Goods. The legal warranty period provided to the Consumer is not affected.

By the Warranty for Goods Quality, the Seller guarantees that the delivered Goods shall be, for a certain period of time, suitable for regular or contracted use, and that the Goods shall maintain its regular or contracted features.

Batteries

6-month battery warranty – we guarantee that battery's nominal capacity does not fall below 70% of its total capacity within 6 months of the product's sale.

The Warranty does not cover defects resulting from (if applicable):

- User's fault, i.e. product damage caused by unqualified repair work, improper assembly, insufficient insertion of seat post into frame, insufficient tightening of pedals and cranks
- Improper maintenance
- Mechanical damages
- Regular use (e.g. wearing out of rubber and plastic parts, moving mechanisms, joints, wear of brake pads/blocks, chain, tires, cassette/multi wheel etc.)
- Unavoidable event, natural disaster
- Adjustments made by unqualified person

- Improper maintenance, improper placement, damages caused by low or high temperature, water, inappropriate pressure, shocks, intentional changes in design or construction etc.

Warranty Claim Procedure

The Buyer is obliged to check the Goods delivered by the Seller immediately after taking the responsibility for the Goods and its damages, i.e. immediately after its delivery. The Buyer must check the Goods so that he discovers all the defects that can be discovered by such check.

When making a Warranty Claim the Buyer is obliged, on request of the Seller, to prove the purchase and validity of the claim by the Invoice or Bill of Delivery that includes the product's serial number, or eventually by the documents without the serial number. If the Buyer does not prove the validity of the Warranty Claim by these documents, the Seller has the right to reject the Warranty Claim.

If the Buyer gives notice of a defect that is not covered by the Warranty (e.g. in the case that the Warranty Conditions were not fulfilled or in the case of reporting the defect by mistake etc.), the Seller is eligible to require a compensation for all the costs arising from the repair. The cost shall be calculated according to the valid price list of services and transport costs.

If the Seller finds out (by testing) that the product is not damaged, the Warranty Claim is not accepted. The Seller reserves the right to claim a compensation for costs arising from the false Warranty Claim.

In case the Buyer makes a claim about the Goods that is legally covered by the Warranty provided by the Seller, the Seller shall fix the reported defects by means of repair or by the exchange of the damaged part or product for a new one. Based on the agreement of the Buyer, the Seller has the right to exchange the defected Goods for a fully compatible Goods of the same or better technical characteristics. The Seller is entitled to choose the form of the Warranty Claim Procedures described in this paragraph.

The Seller shall settle the Warranty Claim within 30 days after the delivery of the defective Goods, unless a longer period has been agreed upon. The day when the repaired or exchanged Goods is handed over to the Buyer is considered to be the day of the Warranty Claim settlement. When the Seller is not able to settle the Warranty Claim within the agreed period due to the specific nature of the Goods defect, he and the Buyer shall make an agreement about an alternative solution. In case such agreement is not made, the Seller is obliged to provide the Buyer with a financial compensation in the form of a refund.

CZ SEVEN SPORT s.r.o.

Registered Office: Strakonická 1151/2c, Praha 5, 150 00, ČR

Headquarters: Dělnická 957, Vítkov, 749 01
Warranty & Service: Čermenská 486, Vítkov 749 01

CRN: 26847264
VAT ID: CZ26847264

Phone: +420 556 300 970
E-mail: eshop@insportline.cz
reklamace@insportline.cz
servis@insportline.cz

Web: www.inSPORTline.cz

SK inSPORTline s.r.o.

Headquarters, warranty & service center: Električná 6471, Trenčín 911 01, SK

CRN: 36311723
VAT ID: SK2020177082

Phone: +421(0)326 526 701
E-mail: objednavky@insportline.sk
reklamacie@insportline.sk
servis@insportline.sk

Web: www.inSPORTline.sk

About shipping

