



**USER MANUAL – EN**

**IN 26291 VibroGym inSPORTline Lotos Max**



# CONTENTS

SAFETY INSTRUCTIONS..... 3

PRODUCT DESCRIPTION ..... 4

ASSEMBLING MATERIAL ..... 4

ASSEMBLY ..... 5

PRIMARY CONTROL PANEL..... 6

SECONDARY CONTROL PANEL ..... 7

ERROR CODES..... 7

MAINTENANCE ..... 7

SPECIFICATIONS..... 8

ENVIRONMENT PROTECTION ..... 8

TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS..... 8


SevenSport s.r.o. reserves the right to make any changes and improvements to its product without prior notice. Visit our website [www.insportline.eu](http://www.insportline.eu) where you will find the latest version of the manual.

## **SAFETY INSTRUCTIONS**

- Read the manual carefully before first use and keep it for future reference.
- Follow all warnings and instructions including assembly instructions. Use the device only for intended purposes.
- Follow assembly instructions. Inform all users about proper use and safety instructions. Assembly can be done by adult person.
- Keep the device away from kids and pets. Do not leave kids and pets near device unattended- Assembly can be carried out by adult person.
- Consult your physician before use. This is important if you have health issues or are undergoing any healing program affecting heart function, blood pressure or cholesterol.
- Always follow your body signals. If you feel pain or other complications (chest pressure, irregular heartbeat, shortness of breath or nausea), stop exercising immediately. Improper exercise can result in serious health complications or injury.
- Place the device on a flat, clean, and dry surface and keep a safety distance of at least 0.6 m from other objects. You can use a mat to protect the floor.
- Wear appropriate sports clothing, including sports shoes. Do not wear loose clothing.
- Do not use outdoors.
- Before each use, check the product for damage or wear. Regularly check all bolts and nuts. Tighten them if necessary. Never use a damaged or worn product.
- Do not use the product if sharp edges appear.
- Do not use the trainer if it makes unusual noises.
- No adjustable part may prohibit or restrict the user's movement. Only one person can use the product at a time.
- The trainer is not intended for therapeutic purposes.
- Be especially careful not to injure your back while lifting and carrying the device. Use only the recommended procedure and ask another adult for help.
- Do not make unapproved modifications to the product. In case of repair, contact a professional service.
- Category: H for home use
- Weight limit: 136 kg


**WARNING: Not following instructions can lead to serious injury.**

# PRODUCT DESCRIPTION

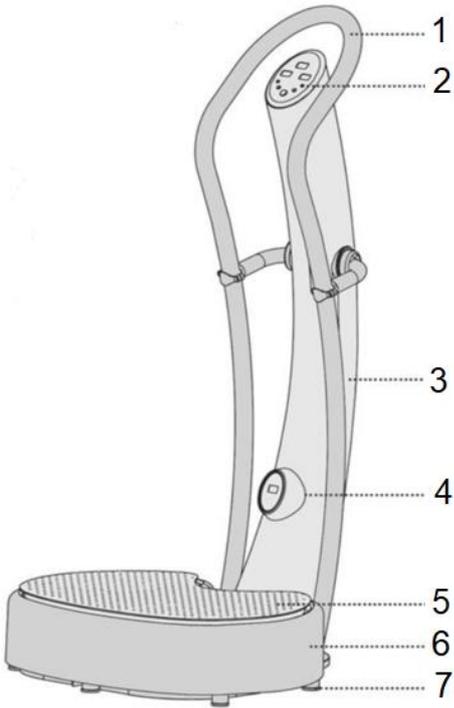


1. Handles
2. Main control panel
3. Middle post
4. Secondary control panel
5. Footplate
6. Base cover
7. Leveling feet

# ASSEMBLING MATERIAL

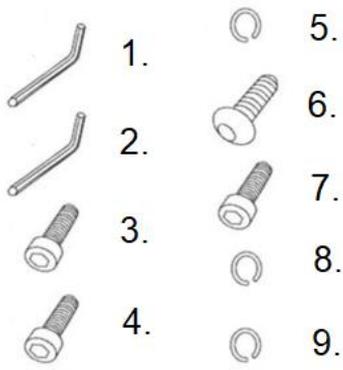


1. Allen key M5
2. Allen key M8
3. Bolt M10x30, 2x
4. Bolt M6x10, 4x
5. Flexible washer M10, 2x
6. Bolt M8x25, 6x
7. Bolt M6x20, 4x
8. Spring washer M8, 6x
9. Spring washer M6, 4x

## ASSEMBLY

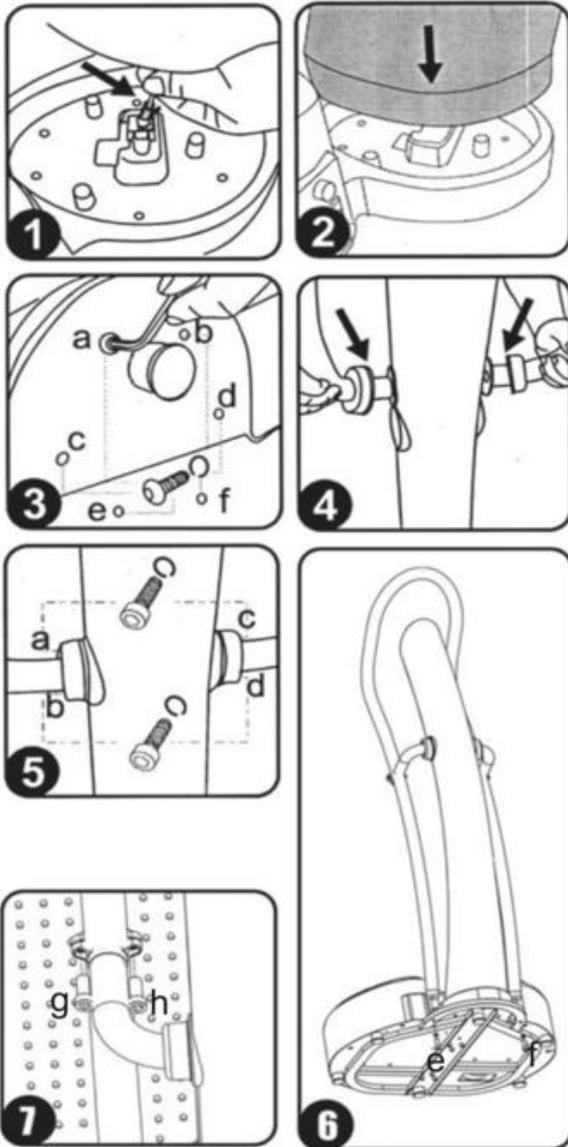

1. Connect the cable running from the middle post to the base.
2. Insert the post into the base.
3. Fix the post to the base with 6x M8x25 bolts.
4. Attach the handles to the middle post.
5. Secure the handles to the post using 4x M6x20 bolts and washers.
6. Attach the handles to the base using 2x M10x30 bolts and washers.
7. Fix the handles in the middle post with 4x M6x10 bolts.

## PRIMARY CONTROL PANEL

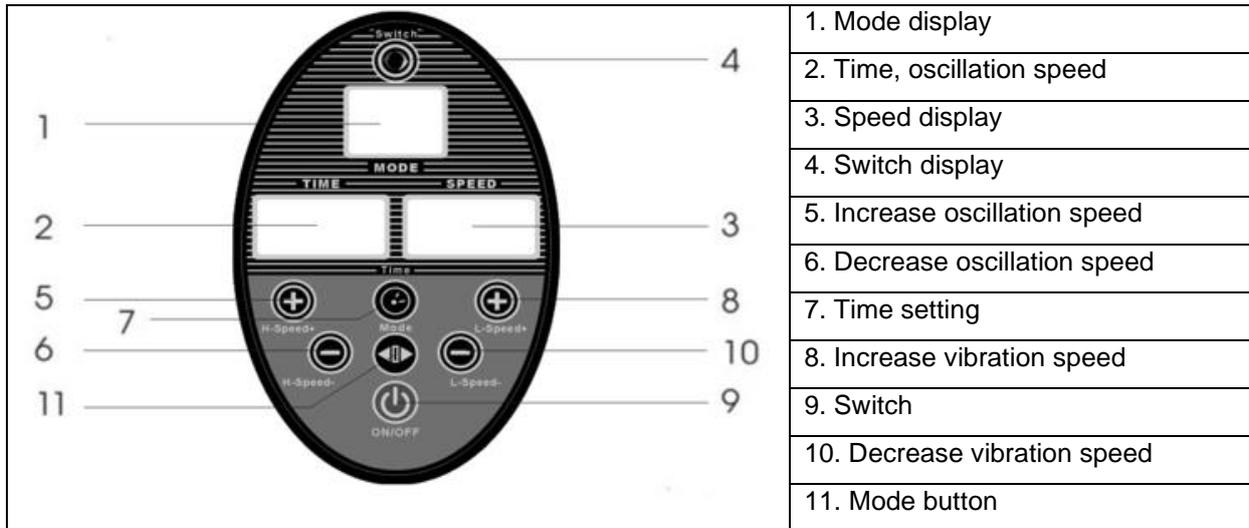

### 1. Mode display

The display shows the current mode including HL (Dual Mode), HS (Vibration), LO (Oscillation), P1 (Preset Program 1), P2 (Preset Program 2), P3 (Preset Program 3), P4 (Preset Program 4), P5 (default program 5)

P1: 2, 6, 10 ... 46, 50, 46, 6, 4 Vibration, the cycle repeats every 5 seconds.

P2: 2, 6, 10 ... 46, 50, 46, 6, 4 Oscillation, the cycle repeats every 5 seconds.

P3: Oscillation: 26, 30, ... 46, 50, 46 ... 6, 2, 6, ... 18, 22

Vibration: 26, 22 ... 6, 46 ... 6, 2, 6 ... 18, 22

The cycle changes every 5 seconds.

P4: 2, 6, 10 ... 46, 50, 46 ... 6, 4 Vibration, the cycle repeats every 0.5 seconds.

P5: 2, 6, 10 ... 46, 50, 46 ... 6, 4 Oscillation, the cycle repeats every 0.5 seconds.

### 2. Timer / Oscillation speed

It shows the training time or the oscillation speed. The remaining time counts down from the set value (X.XX) to 0.00.

The oscillation speed is displayed in the value (HXX) after pressing the switch buttons.

### 3. Speed display

Displays speed. The display will switch between showing vibration speed (LXX) and oscillation speed (HXX) every 5 seconds. The display range is from 0 to 50.

### 4. Time/oscillation display switch

Press the button to switch between displaying the oscillation speed and the exercise time.

### 5. Increase oscillation speed

Increase the speed of oscillation or adjust the time in the time setting mode.

### 6. Decrease oscillation speed

Decrease the speed of oscillation or adjust the time in the time setting mode.

### 7. Timer

If no program is running, press the button to adjust time. You can adjust the time using the speed adjustment buttons.

### 8. Increase vibration speed

Increase the vibration speed or adjust the time in the time setting mode.

9. Switch

Press to start or stop the program.

10. Decrease vibration speed

Decrease the vibration speed or adjust the time in the time setting mode.

11. Mode button


Press to switch between modes: HL (Dual Mode), HS (Vibration), LO (Oscillation), P1 (Preset Program 1), P2 (Preset Program 2), P3 (Preset Program 3), P4 (Preset Program 4), P5 (default program 5)

**Main switch**



Use the main switch to turn on/off the device.  
Make sure it is properly plugged in.

## SECONDARY CONTROL PANEL

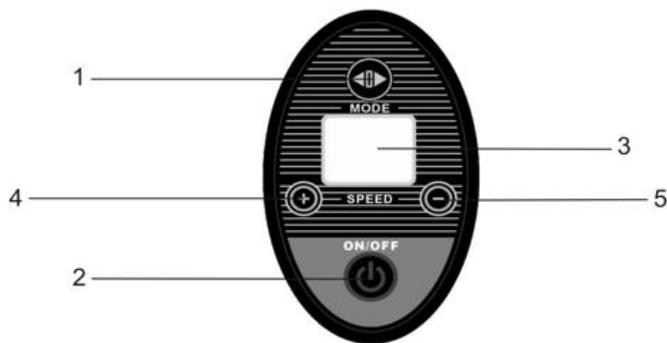

1. Switch mode

2. Power switch

3. Display

4. Increase button

5. Decrease button

## ERROR CODES

E3: undervoltage protection

E4: high voltage protection

E5: oscillating motor overload

E6: vibration motor overload

E7: connection error

## MAINTENANCE

- Tighten all bolts and nuts every 2 months.
- Keep away from water and fire.
- After use, wipe all parts with a dry cloth.
- Unplug after use.

## SPECIFICATIONS

Speed:	1 - 50
Weight limit:	136 kg
Input voltage	60 Hz / 110 V
Input current:	5A
Maximum performance:	200 W (oscillation), 250 W (vibration)
Dimension:	66.04 x 64.77 x 128.27 cm
Weight:	30 kg net, 35 kg gross

## ENVIRONMENT PROTECTION

After the product lifespan expired or if the possible repairing is uneconomic, dispose it according to the local laws and environmentally friendly in the nearest scrapyard.

By proper disposal you will protect the environment and natural sources. Moreover, you can help protect human health. If you are not sure in correct disposing, ask local authorities to avoid law violation or sanctions.

Don't put the batteries among house waste but hand them in to the recycling place.

## TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS

### General Conditions of Warranty and Definition of Terms

All Warranty Conditions stated here under determine Warranty Coverage and Warranty Claim Procedure. Conditions of Warranty and Warranty Claims are governed by Act No. 89/2012 Coll. Civil Code, and Act No. 634/1992 Coll., Consumer Protection, as amended, also in cases that are not specified by these Warranty rules.

The seller is SEVEN SPORT s.r.o. with its registered office in Strakonická street 1151/2c, Prague 150 00, Company Registration Number: 26847264, registered in the Trade Register at Regional Court in Prague, Section C, Insert No. 116888.

According to valid legal regulations it depends whether the Buyer is the End Customer or not.

"The Buyer who is the End Customer" or simply the "End Customer" is the legal entity that does not conclude and execute the Contract in order to run or promote his own trade or business activities.

"The Buyer who is not the End Customer" is a Businessman that buys Goods or uses services for the purpose of using the Goods or services for his own business activities. The Buyer conforms to the General Purchase Agreement and business conditions.

These Conditions of Warranty and Warranty Claims are an integral part of every Purchase Agreement made between the Seller and the Buyer. All Warranty Conditions are valid and binding, unless otherwise specified in the Purchase Agreement, in the Amendment to this Contract or in another written agreement.

### Warranty Conditions

#### Warranty Period

The Seller provides the Buyer a 24 months Warranty for Goods Quality, unless otherwise specified in the Certificate of Warranty, Invoice, Bill of Delivery or other documents related to the Goods. The legal warranty period provided to the Consumer is not affected.

By the Warranty for Goods Quality, the Seller guarantees that the delivered Goods shall be, for a certain period of time, suitable for regular or contracted use, and that the Goods shall maintain its regular or contracted features.

### Batteries

6-month battery warranty – we guarantee that battery's nominal capacity does not fall below 70% of its total capacity within 6 months of the product's sale.

**The Warranty does not cover defects resulting from (if applicable):**

- User's fault, i.e. product damage caused by unqualified repair work, improper assembly, insufficient insertion of seat post into frame, insufficient tightening of pedals and cranks
- Improper maintenance
- Mechanical damages
- Regular use (e.g. wearing out of rubber and plastic parts, moving mechanisms, joints, wear of brake pads/blocks, chain, tires, cassette/multi wheel etc.)
- Unavoidable event, natural disaster
- Adjustments made by unqualified person
- Improper maintenance, improper placement, damages caused by low or high temperature, water, inappropriate pressure, shocks, intentional changes in design or construction etc.

**Warranty Claim Procedure**

The Buyer is obliged to check the Goods delivered by the Seller immediately after taking the responsibility for the Goods and its damages, i.e. immediately after its delivery. The Buyer must check the Goods so that he discovers all the defects that can be discovered by such check.

When making a Warranty Claim the Buyer is obliged, on request of the Seller, to prove the purchase and validity of the claim by the Invoice or Bill of Delivery that includes the product's serial number, or eventually by the documents without the serial number. If the Buyer does not prove the validity of the Warranty Claim by these documents, the Seller has the right to reject the Warranty Claim.

If the Buyer gives notice of a defect that is not covered by the Warranty (e.g. in the case that the Warranty Conditions were not fulfilled or in the case of reporting the defect by mistake etc.), the Seller is eligible to require a compensation for all the costs arising from the repair. The cost shall be calculated according to the valid price list of services and transport costs.

If the Seller finds out (by testing) that the product is not damaged, the Warranty Claim is not accepted. The Seller reserves the right to claim a compensation for costs arising from the false Warranty Claim.

In case the Buyer makes a claim about the Goods that is legally covered by the Warranty provided by the Seller, the Seller shall fix the reported defects by means of repair or by the exchange of the damaged part or product for a new one. Based on the agreement of the Buyer, the Seller has the right to exchange the defected Goods for a fully compatible Goods of the same or better technical characteristics. The Seller is entitled to choose the form of the Warranty Claim Procedures described in this paragraph.

The Seller shall settle the Warranty Claim within 30 days after the delivery of the defective Goods, unless a longer period has been agreed upon. The day when the repaired or exchanged Goods is handed over to the Buyer is considered to be the day of the Warranty Claim settlement. When the Seller is not able to settle the Warranty Claim within the agreed period due to the specific nature of the Goods defect, he and the Buyer shall make an agreement about an alternative solution. In case such agreement is not made, the Seller is obliged to provide the Buyer with a financial compensation in the form of a refund.

**CZ**  
**SEVEN SPORT s.r.o.**

Registered Office: Strakonická 1151/2c, Praha 5, 150 00, ČR  
Headquarters: Dělnická 957, Vítkov, 749 01  
Warranty & Service: Čermenská 486, Vítkov 749 01

CRN: 26847264  
VAT ID: CZ26847264

Phone: +420 556 300 970  
E-mail: eshop@insportline.cz  
reklamace@insportline.cz  
servis@insportline.cz

Web: www.inSPORTline.cz

**SK**  
**inSPORTline s.r.o.**

Headquarters, warranty & service center: Električná 6471,  
Trenčín 911 01, SK

CRN: 36311723  
VAT ID: SK2020177082

Phone: +421(0)326 526 701  
E-mail: objednavky@insportline.sk  
reklamacie@insportline.sk  
servis@insportline.sk

Web: www.inSPORTline.sk

**About shipping**

