



**USER MANUAL – EN**

**IN 27384 Infrasauna inSPORTline Mettsa 200**



# CONTENTS

SAFETY INSTRUCTIONS..... 3  
ASSEMBLY ..... 4  
CONTROLS..... 8  
USE ..... 9  
ACCESSORIES..... 9  
CLEANING AND MAINTENANCE ..... 9  
WOOD CARE ..... 9  
ENVIRONMENT PROTECTION ..... 10  
TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS..... 10

SevenSport s.r.o. reserves the right to make any changes and improvements to its product without prior notice. Visit our website [www.insportline.eu](http://www.insportline.eu) where you will find the latest version of the manual.

 
## **SAFETY INSTRUCTIONS**

- Please read the manual before use and assembly and keep it for future reference.
- At least 2 people are needed for assembly.
- If the temperature is too high, immediately turn off the sauna and leave.
- Do not use during pregnancy or if you have fevers, bleeding, or inflammation.
- Do not use if you suffer from cardiovascular disease, high blood pressure, neurotic disease, sensitivity to heat, menstruation, joint pain, arthritis or have a medical implant.
- Do not spray water on heating elements and electronics.
- Do not bring wet towels, clothes or other substances into the sauna, it could damage the interior.
- Children and the elderly, or persons with limited motor or mental abilities may only use the sauna under the supervision of an adult or guardian.
- If you feel nausea or pain, stop immediately and contact a doctor.
- Do not install locks on the sauna.
- Do not wear jewelry when the sauna is running.
- Do not repair or modify the sauna yourself. Any modifications must be carried out by the service.
- When the device is not in use, it must be secured against misuse by children or other unauthorized persons.
- Never leave the sauna running and plugged in unattended.
- The sauna must be placed on a flat and solid surface.
- Do not consume alcohol, medications, drugs or other substances that affect judgment before or during use.
- Consult a doctor before use.
- Keep away from open fire, flames, and heat.
- Keep away from water.
- The sauna must be connected to its own and separate socket or in its own electrical circuit.
- The sana must be placed in a well-ventilated room.
- Do not use continuously for more than 40 min.
- The sauna does not constitute a medical or therapeutic device or a substitute for medical care.
- For indoor use, protect from weather.


# ASSEMBLY

## WALL CONNECTION SYSTEM


Locking two panels together using the male-female system.

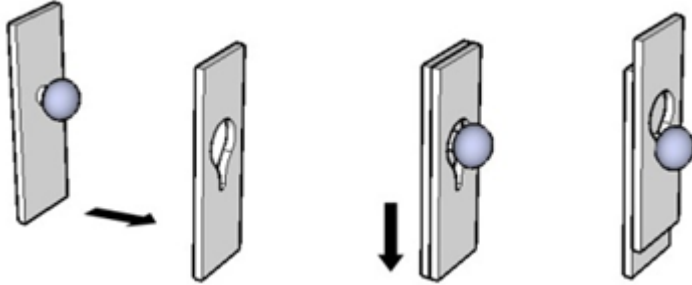

 Align the panels and lift them slightly. Secure the panels with the locking system by sliding the panels into each other. Make sure all edges are snug.

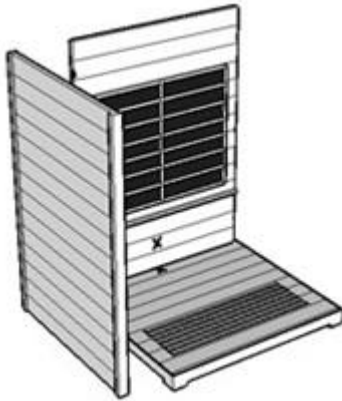

 
1. Align the panels

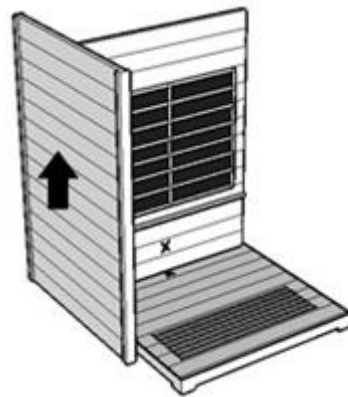

2. Lift the panel.




 3. Secure the panels using the locking system.

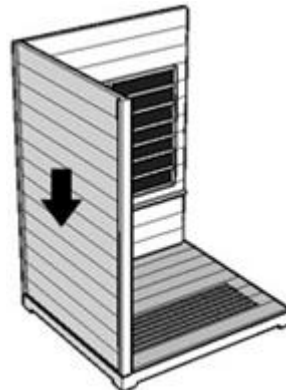


4. Slide down the panel.


## Buckle fastening

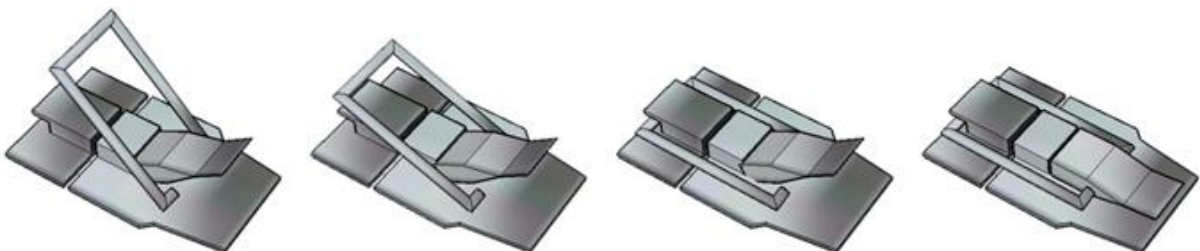 

 
Carefully unpack all parts. The accessories are placed between the floor and ceiling panels.

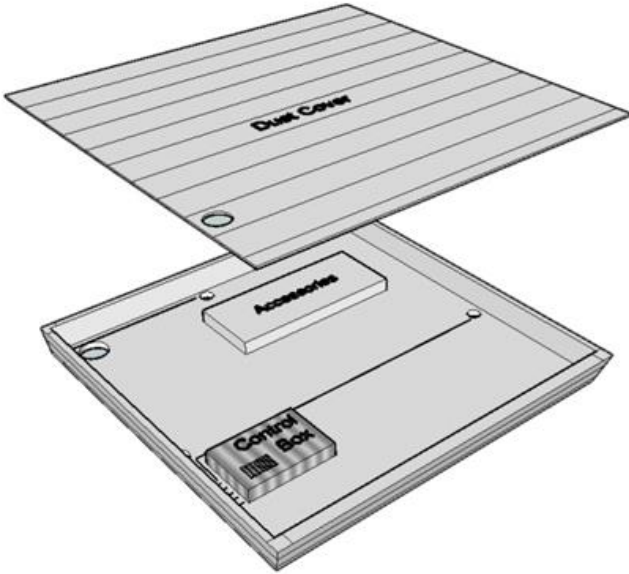

 
Place the floor on a flat and clean surface with enough space for assembly. The back of the sauna is marked "rear".

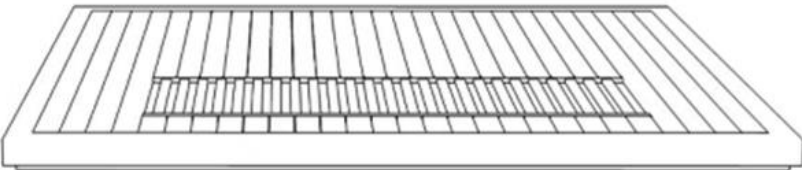

 
One person must hold the back panel while the other secures the panel to the sauna floor. Fix the left wall, the top side is marked "up". Connect the panel to the back panel and the floor. Make sure the panels fit together.

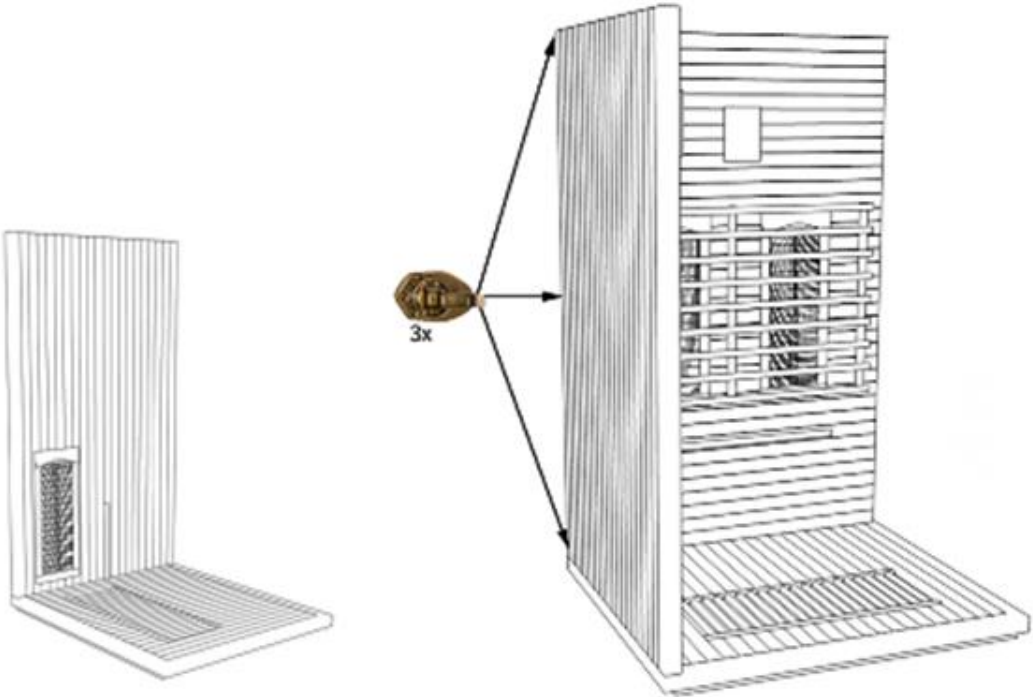

 Attach the right panel with the top side marked "up". Make sure all panels are aligned.

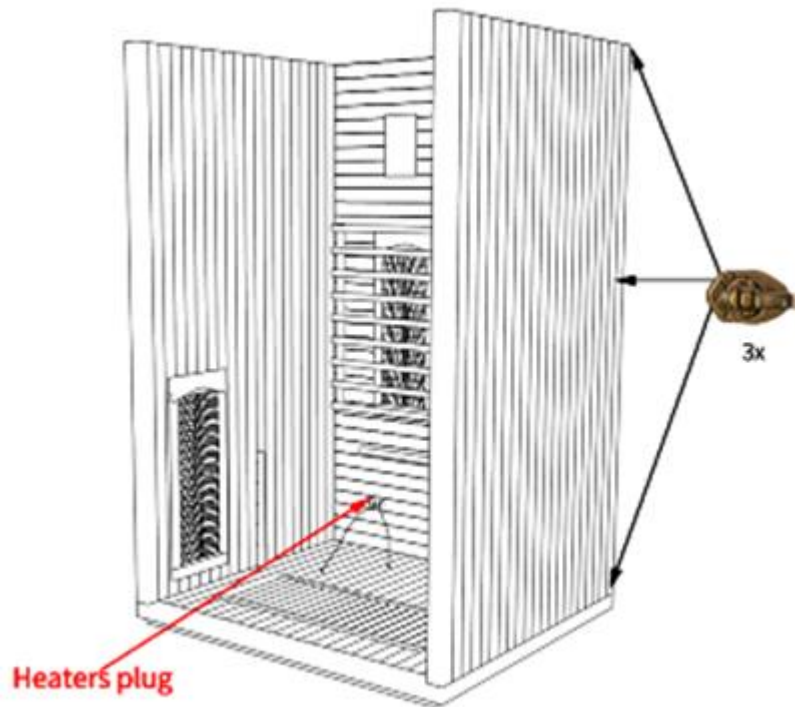


 Slide the bench into the side rails on both sides and into the rear panel. The treated side of the bench must face up and forward. Plug all accessories into the corresponding plugs, always plug the corresponding plug into the corresponding socket (A to A etc.)

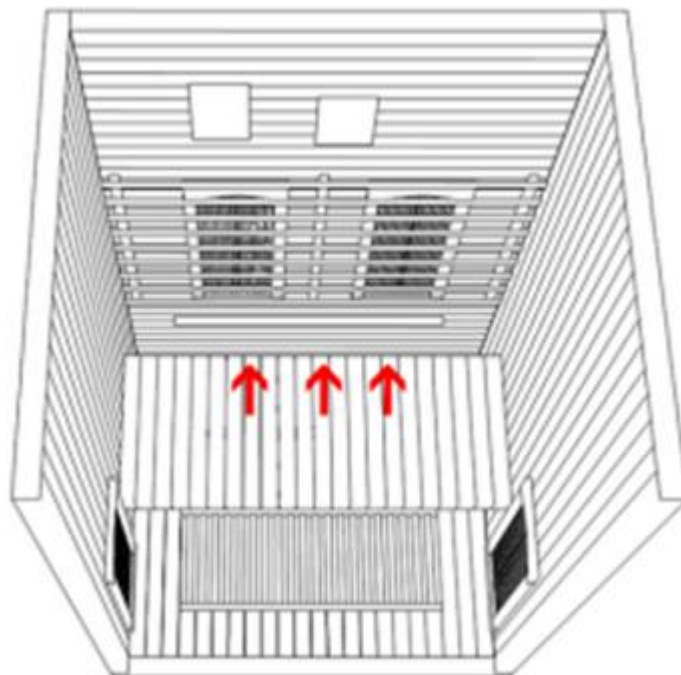

Before fixing the door panel, attach the handle.

 
Attach the front panel with the door. Make sure all sides are aligned and snug when attached. If the front panel is too heavy, ask another person to help.

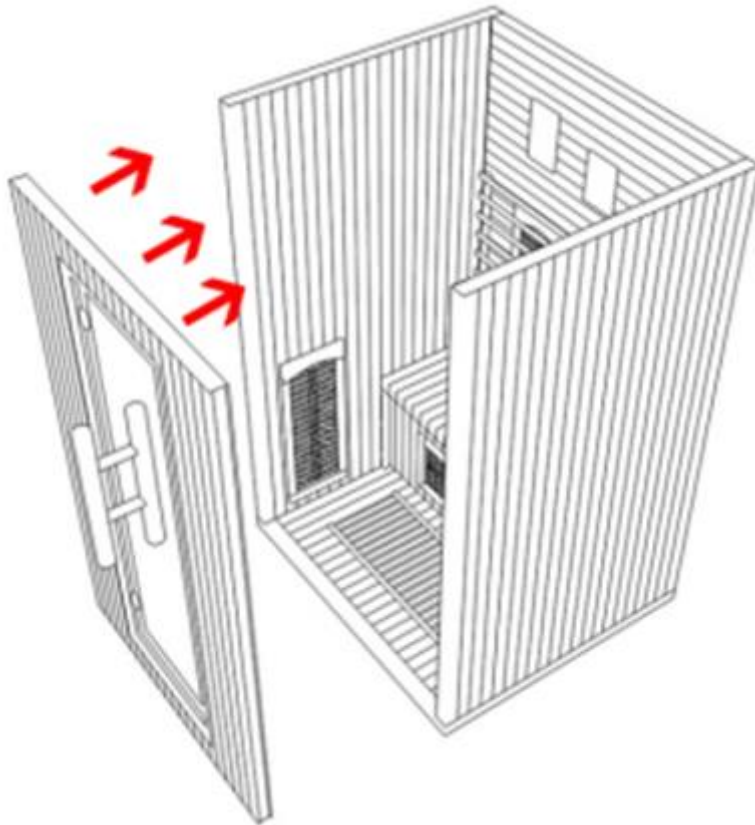


Fix the ceiling of the sauna. Push all cables and connections through the hole. Connect the control panel (white cable) and the temperature sensor (2-pin).

Connect the heater to the control unit. The heater can be connected to any compatible socket in the control unit.

 Attach the dust cover to the ceiling and pull the main power cable through the opening. Make sure the cable holes are aligned.

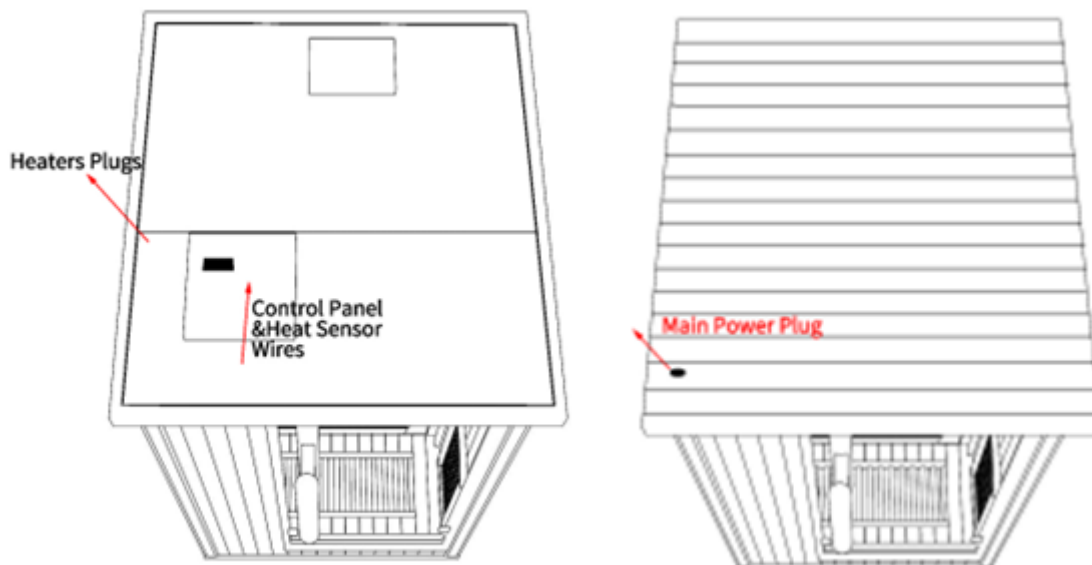

# CONTROLS

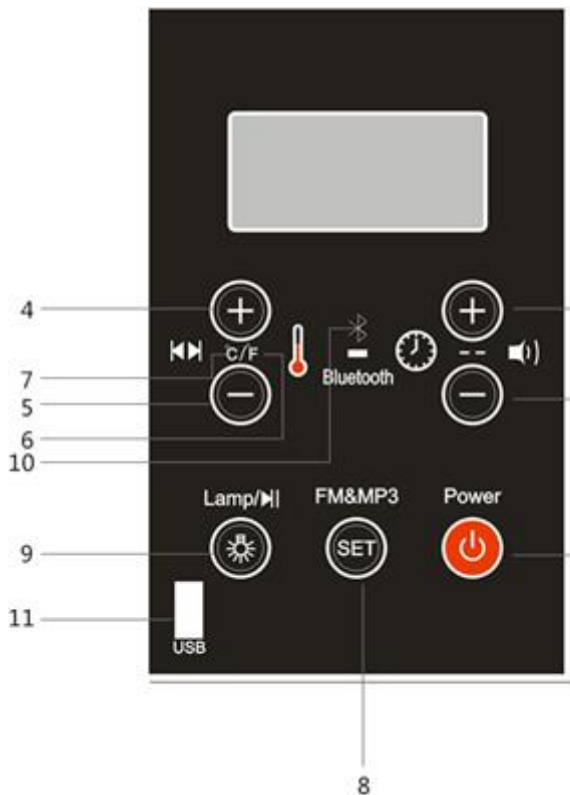 

- 1. Power switch

---

- 2. Timer (Decrease) / Volume (Decrease)

---

- 3. Timer (Increase) / Volume (Increase)

---

- 4. Temperature (Increase) / Music (Previous Song)

---

- 5. Temperature (Decrease) / Music (Next Song)

---

- 6. Fahrenheit

---

- 7. Celsius

---

- 8. Settings

---

- 9. Lighting / pause music

---

- 10. Bluetooth connection

---

- 11. USB port

## 1. Power switch

Press to start/stop the sauna.

## 2. 3. Timer

Active timer: Use the (+) and (-) buttons to set timer. After setting, the countdown starts, after reaching 0, it turns off.

Active volume control: If music control is active, use the buttons to adjust the volume.

Active timer: Continuous operation (timer off): press the (+) and (-) buttons simultaneously to turn off the timer. The display will show (--). To start the timer, just press one of the (+) or (-) buttons.

Active volume control: FM frequency search: if the radio is active, press the (+) and (-) buttons simultaneously to search for all nearby stations. The search may take up to 2 minutes.

## 4. 5. Temperature setting

Active temperature: Use the (+) and (-) buttons to set the desired temperature.

Active music control: Use (+) and (-) buttons to select MP3 track or FM frequency.

## 6. 7. Unit selection

While setting the temperature, hold the (+) and (-) buttons to change the unit.

## 8. Settings

Press the button to switch between MP3 and FM radio.

## 9. Lighting / pause

If the music is not playing, the button is used to turn on / off the lighting.

If the music is playing, it is used to pause the music.

## 10. Bluetooth



If the indicator is lit, Bluetooth is active.

## 11. USB

Connecting a device for playing MP3 music.

## USE

Allow the sauna to heat up to 43°C (110°F) for 15-20 minutes. You can close the ventilation for faster heating. Drink plenty of water to avoid dehydration. We do not recommend continuous operation longer than 40 min. During operation, regularly open the ventilation to have a supply of fresh air.

Always start to use the sauna approximately 10° from the set temperature (if you have a set temperature of 52°C, start using the sauna as soon as the temperature reaches 42°C).

## ACCESSORIES

Oxygen ionizer



The ionizer is connected to the ceiling using a 1-pin connection. After connecting to the pin, screw in the ionizer.

An ionizer is used to freshen the air and remove odors caused by bacteria.

Before and during use, run the ion function. After use, select O<sub>3</sub> function to remove odor.

Lighting color



Use the control to select the lighting color.

You can turn off the lighting with the switch, or you can start a cycle where the colors will change gradually.

## CLEANING AND MAINTENANCE

Use a clean damp cloth to wipe down the bench, floor, and the back panel. Do not use cleaning agents or a wet cloth that could cause puddles of water.

Make sure to keep the sauna dry and clean. Do not leave towels, water glasses or bottles in the sauna after use. At least once a month, wipe the outside of the sauna with a cloth and clean the glass.

## WOOD CARE

If the outside of the wood is scuffed, it can be polished with a small amount of furniture polish, oil or similar wood furniture care product. Internal defects, scratches or abrasions can be repaired by light sanding, glue or a combination of both techniques. Avoid any products containing benzene or high concentration of alcohol.

## TROUBLESHOOTING

### The sauna will not start

- Make sure the power cord is firmly plugged into the electrical outlet and the control box (on top of the sauna).
- Make sure the circuit breaker is not turned off.
- Make sure the white wire of the control panel is properly connected.
- Make sure the outlet is working, try another device in the same outlet.

### The light doesn't work

- Replace the bulb.

#### **The colored light does not work**

- Make sure the battery is inserted correctly.
- Make sure you point the remote control directly at the remote control receiver (the small rounded tip next to the colored lights).
- Insert a new battery.

#### **All heaters are not working**

- Make sure the heater plugs are connected to the control box (on top of the sauna).
- Make sure the sauna is connected to the recommended power source.
- Make sure the temperature sensor is connected correctly.

#### **One or more heaters are not working**

- Make sure the heater plugs are connected to the control box (on top of the sauna).
- Make sure the plugs of the heaters under the bench are connected correctly.
- Floor heating and underfloor heating have a lower design temperature.
- Make sure the heater is connected.

#### **The control panel display does not show the correct data**

- If the temperature on the control panel is higher than 150 or 230, make sure the temperature sensor is connected correctly.
- If the time display on the control panel is -- (two dashes), the sauna is switched on in continuous operation. Press the timer button to return to the countdown timer.

## **ENVIRONMENT PROTECTION**

After the product lifespan expired or if the possible repairing is uneconomic, dispose it according to the local laws and environmentally friendly in the nearest scrapyard.

By proper disposal you will protect the environment and natural sources. Moreover, you can help protect human health. If you are not sure in correct disposing, ask local authorities to avoid law violation or sanctions.

Don't put the batteries among house waste but hand them in to the recycling place.

## **TERMS AND CONDITIONS OF WARRANTY, WARRANTY CLAIMS**

### **General Conditions of Warranty and Definition of Terms**

All Warranty Conditions stated here under determine Warranty Coverage and Warranty Claim Procedure. Conditions of Warranty and Warranty Claims are governed by Act No. 89/2012 Coll. Civil Code, and Act No. 634/1992 Coll., Consumer Protection, as amended, also in cases that are not specified by these Warranty rules.

The seller is SEVEN SPORT s.r.o. with its registered office in Strakonická street 1151/2c, Prague 150 00, Company Registration Number: 26847264, registered in the Trade Register at Regional Court in Prague, Section C, Insert No. 116888.

According to valid legal regulations it depends whether the Buyer is the End Customer or not.

“The Buyer who is the End Customer” or simply the “End Customer” is the legal entity that does not conclude and execute the Contract in order to run or promote his own trade or business activities.

“The Buyer who is not the End Customer” is a Businessman that buys Goods or uses services for the purpose of using the Goods or services for his own business activities. The Buyer conforms to the General Purchase Agreement and business conditions.

These Conditions of Warranty and Warranty Claims are an integral part of every Purchase Agreement made between the Seller and the Buyer. All Warranty Conditions are valid and binding, unless otherwise specified in the Purchase Agreement, in the Amendment to this Contract or in another written agreement.

### **Warranty Conditions**

#### **Warranty Period**

The Seller provides the Buyer a 24 months Warranty for Goods Quality, unless otherwise specified in the Certificate of Warranty, Invoice, Bill of Delivery or other documents related to the Goods. The legal warranty period provided to the Consumer is not affected.

By the Warranty for Goods Quality, the Seller guarantees that the delivered Goods shall be, for a certain period of time, suitable for regular or contracted use, and that the Goods shall maintain its regular or contracted features.

#### **Batteries**

6-month battery warranty – we guarantee that battery's nominal capacity does not fall below 70% of its total capacity within 6 months of the product's sale.

#### **The Warranty does not cover defects resulting from (if applicable):**

- User's fault, i.e. product damage caused by unqualified repair work, improper assembly, insufficient insertion of seat post into frame, insufficient tightening of pedals and cranks
- Improper maintenance
- Mechanical damages
- Regular use (e.g. wearing out of rubber and plastic parts, moving mechanisms, joints, wear of brake pads/blocks, chain, tires, cassette/multi wheel etc.)
- Unavoidable event, natural disaster
- Adjustments made by unqualified person
- Improper maintenance, improper placement, damages caused by low or high temperature, water, inappropriate pressure, shocks, intentional changes in design or construction etc.

#### **Warranty Claim Procedure**

The Buyer is obliged to check the Goods delivered by the Seller immediately after taking the responsibility for the Goods and its damages, i.e. immediately after its delivery. The Buyer must check the Goods so that he discovers all the defects that can be discovered by such check.

When making a Warranty Claim the Buyer is obliged, on request of the Seller, to prove the purchase and validity of the claim by the Invoice or Bill of Delivery that includes the product's serial number, or eventually by the documents without the serial number. If the Buyer does not prove the validity of the Warranty Claim by these documents, the Seller has the right to reject the Warranty Claim.

If the Buyer gives notice of a defect that is not covered by the Warranty (e.g. in the case that the Warranty Conditions were not fulfilled or in the case of reporting the defect by mistake etc.), the Seller is eligible to require a compensation for all the costs arising from the repair. The cost shall be calculated according to the valid price list of services and transport costs.

If the Seller finds out (by testing) that the product is not damaged, the Warranty Claim is not accepted. The Seller reserves the right to claim a compensation for costs arising from the false Warranty Claim.

In case the Buyer makes a claim about the Goods that is legally covered by the Warranty provided by the Seller, the Seller shall fix the reported defects by means of repair or by the exchange of the damaged part or product for a new one. Based on the agreement of the Buyer, the Seller has the right to exchange the defected Goods for a fully compatible Goods of the same or better technical characteristics. The Seller is entitled to choose the form of the Warranty Claim Procedures described in this paragraph.

The Seller shall settle the Warranty Claim within 30 days after the delivery of the defective Goods, unless a longer period has been agreed upon. The day when the repaired or exchanged Goods is handed over to the Buyer is considered to be the day of the Warranty Claim settlement. When the

Seller is not able to settle the Warranty Claim within the agreed period due to the specific nature of the Goods defect, he and the Buyer shall make an agreement about an alternative solution. In case such agreement is not made, the Seller is obliged to provide the Buyer with a financial compensation in the form of a refund.

**CZ**  
**SEVEN SPORT s.r.o.**

Registered Office: Strakonická 1151/2c, Praha 5, 150 00, ČR  
Headquarters: Dělnická 957, Vítkov, 749 01  
Warranty & Service: Čermenská 486, Vítkov 749 01

CRN: 26847264  
VAT ID: CZ26847264  
Phone: +420 556 300 970  
E-mail: eshop@insportline.cz  
reklamace@insportline.cz  
servis@insportline.cz

Web: www.inSPORTline.cz

**SK**  
**inSPORTline s.r.o.**

Headquarters, warranty & service center: Električná 6471,  
Trenčín 911 01, SK

CRN: 36311723  
VAT ID: SK2020177082  
Phone: +421(0)326 526 701  
E-mail: objednavky@insportline.sk  
reklamacie@insportline.sk  
servis@insportline.sk

Web: www.inSPORTline.sk

**About shipping**

